



YESTERDAY'S COMFORT. TODAY'S PERFORMANCE.

INSTALLATION INSTRUCTIONS OF TYPICAL WALL HOOK KIT PART #SJ-8


All of Ecorad wall-mounted radiators must be secured to the structure using the hook kit provided by Ecorad.

Required material:




pencil tape measure stud finder level drill 1/8" bit screwdriver

Material included:

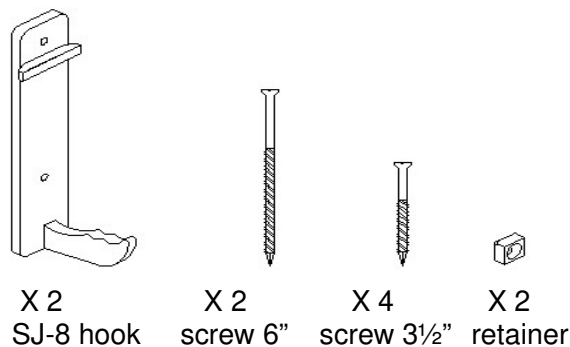


Warning for electric radiator installation: the junction box must always be at the bottom, on either the left or right side

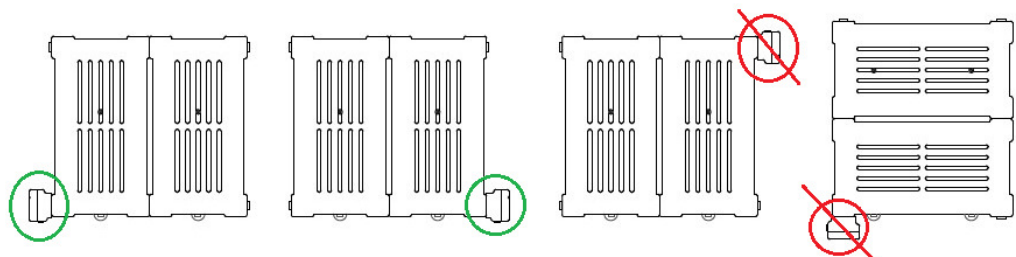



YESTERDAY'S COMFORT. TODAY'S PERFORMANCE.

INSTALLATION INSTRUCTIONS OF TYPICAL WALL HOOK KIT PART #SJ-8

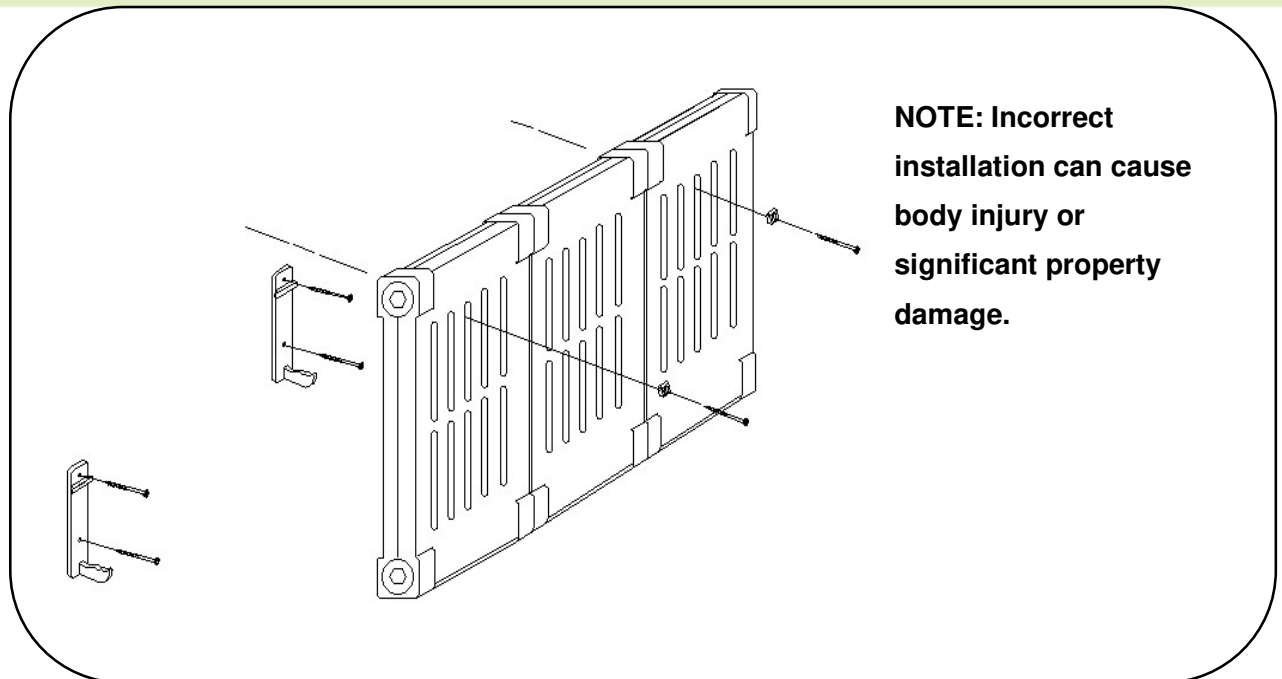

1. Locate proper anchoring point for installation of each hook against the wall. Use the stud finder if required. Place the hooks in such a way as to allow a good distribution of the load of the radiator, as shown above.
2. The installation height is according to your desired layout.
3. On the wall, level both hooks and mark all the holes. Drill a hole for each marking.
4. Firmly fix the hooks to the wall using the 3½" screws provided.
5. Lift, center and seat the radiator on the hooks. You may require help to hold it in place.
6. Secure the radiator using 6" screws and retainers through a stud or an anchoring, in the wall. The rounded corners of the retainers must face the inside of the radiator. Refer to figure for proper retainer position. Do not overtighten.
7. Make sure the radiator is firmly anchored before connection.